


## B8472, B8473, B8474, B8475

### Hydraulic oil flow for valves

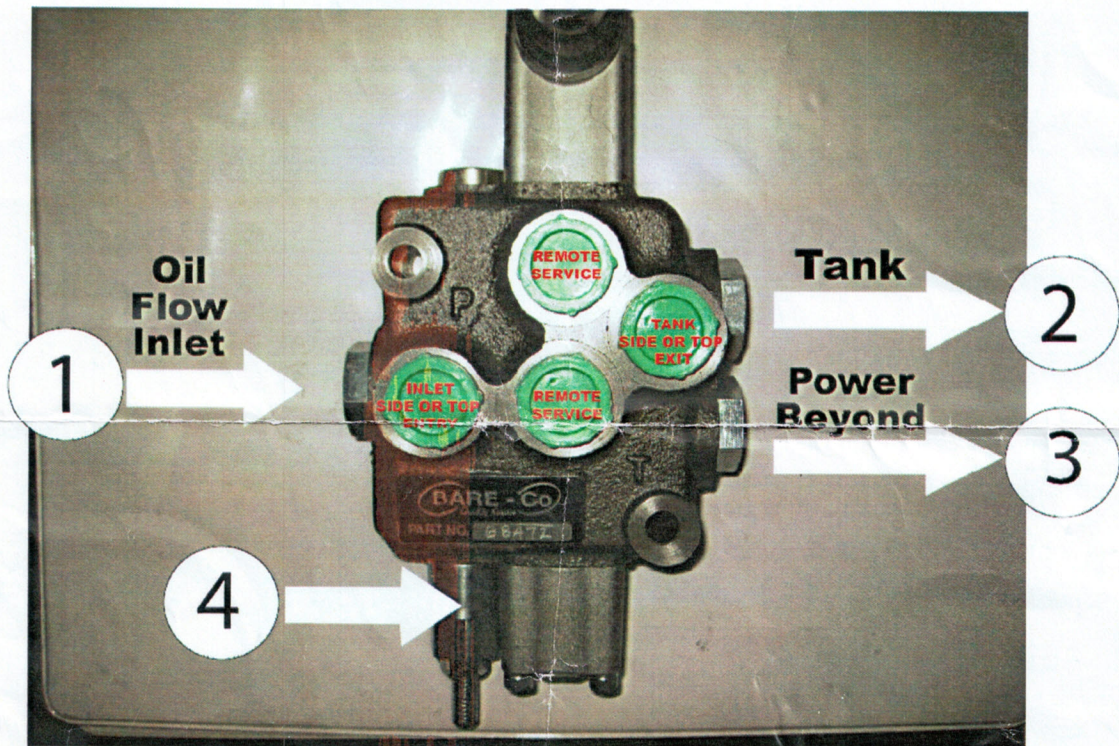

1. Oil flow inlet can be fitted to side port or top port.
2. Tank return can be fitted to side port or top port.
3. Power beyond side port only. Requires plug B8476 in port (3) to make power beyond. **WARNING: Power beyond always needs return line number (2) to tank.**
4. Relief valve.

*All ports 3/4" UN" O" Ring*